


**The RE667 Slimline Touchpad** is an intuitive interface for controlling the Connect+ security system. It is AC powered and communicates with the panel wirelessly.

### Features

- Vibrant 7" Android tablet display
- Provides local control of security and automation functionality
- Wall or table mounted
- Encrypted, Connect+ enabled, battery-backed Wi-Fi™ connection

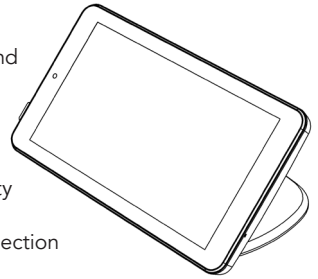


### Installation Overview

1. **Confirm the panel has a Wi-Fi DeviceLink card** installed if using with Connect+.

#### Installing the Wi-Fi DeviceLink Card

- Disconnect the panel's AC power and backup battery.
- Install the Wi-Fi DeviceLink card in **Slot 2** by carefully aligning the nylon retention posts and the 8-pin connector while pushing the card firmly until all posts are fully seated.
- Reconnect the panel's AC power and backup battery.
- Verify the Wi-Fi card LEDs are on.

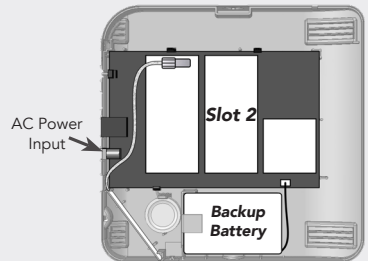


2. **Choose a mounting location.** Touchpad can be mounted on a wall or tabletop.

3. **Verify signal strength** at the desired location before mounting it permanently.


#### Verifying Signal Strength

1. Make sure the panel is powered and the Wi-Fi DeviceLink card is installed.
2. Power the Touchpad by applying AC power.
3. Select the "Connect" option to see the available networks. If the "Connect" option is not available, press "Setup" then "Factory Default".
4. If the signal strength displayed is less than 35, relocate Touchpad or Connect+ panel. If neither options are available, install an RE621 Touchpad Range Extender.

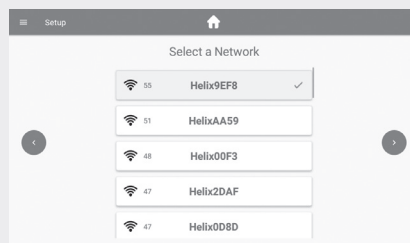

4. **Mount the Touchpad.** Refer to section "Touchpad Mounting Options" for mounting instructions.

5. **Enroll the Touchpad** by pressing the enroll button on the side of the panel until it beeps once and then selecting the desired panel on the Touchpad. Note, the Touchpad will list all panels within range, not just the ones in enrollment mode. The network "names" will include the last 4 digits of the MAC Address printed on the panel label.

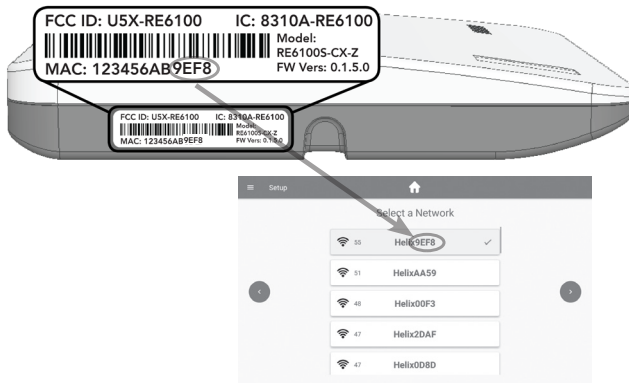

After selecting the desired panel, the Touchpad will progress through stages of discovery and authentication. Upon success it will show the DISARMED screen. If the wrong panel was selected, press the "Restart" button in the side menu.

#### **Troubleshooting Steps if Enrollment Fails:**


- Confirm the panel is disarmed and in wireless enrollment mode. A red light will flash on the panel if in wireless enrollment mode.
- Check whether the panel is already full. The limit is four Touchpads. To confirm number of Touchpads connected, log into your account.
- Tap the "Restart" button to try again.

6. **Test the Touchpad** by arming and disarming the panel from the Touchpad.


## **Touchpad Mounting Options**

### **Table Top Mounting**


1. **Connect the power adapter** by inserting the connector into the black port. Once inserted, turn the connector to the right to lock into place.

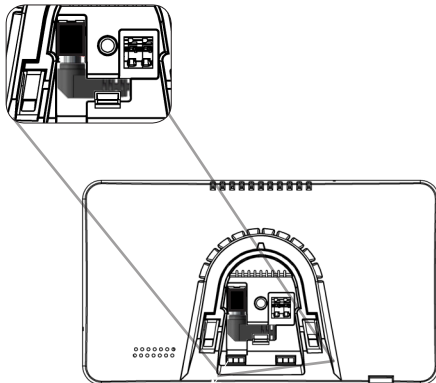

2. **Slide the Touchpad onto the stand.** The fit is intended to be quite snug, so some force may be required for the stand to “click” into place.

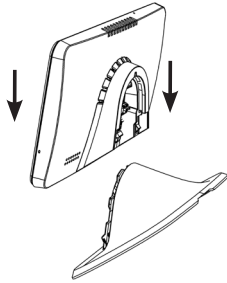

3. **Coil up the excess power wire** into the stand, and close the stand cover to contain the wires.

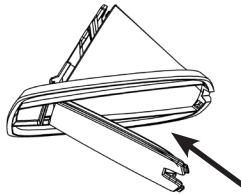


4. **Plug in power supply.**

## Wall Mounting

1. **There are two mounting configurations.**

**A. If mounting on a stud,** use the two centered holes labeled below [A].

**B. If not mounting on a stud,** use the four corner mounting holes. Insert the wall anchors prior to screwing the screws in place [B].

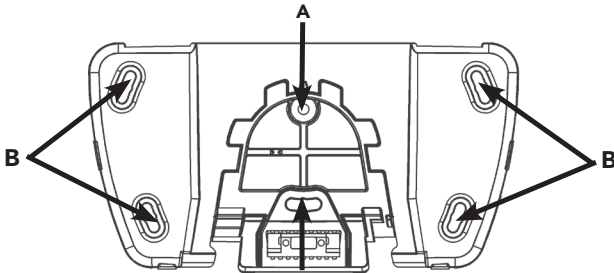


**2. There are two methods for connecting power to the Touchpad.**

**A. If you desire to hide the power cable,** you can drill a hole in the wall through one of the four windows in the mounting plate and pull a wire behind the drywall to a location with an AC power outlet. Connect one end of the wire to the terminal block on the back of the tablet. Push the buttons on the terminal block to allow the wire to be inserted. Splice the other end of the wires to the power supply wires after cutting off the barrel jack. **MUST USE PROVIDED POWER SUPPLY.** Power from an existing panel may be insufficient. Wire length must not exceed lengths listed below.


WIRE GAUGE	MAXIMUM LENGTH BETWEEN POWER SUPPLY AND TABLET
#24	Up to 70 feet
#22	Up to 100 feet
#20	Up to 175 feet
#18	Up to 250 feet
#16	Up to 450 feet

**B. Barrel jack of the power supply** can be plugged directly into the back of the Touchpad. Wires can be routed through wire channel in the back of mounting base. This configuration requires the barrel jack be routed through the mounting base before the mounting base is screwed to the wall.


**3. Slide the Touchpad** onto the mounting plate. Push any extra wire into wall before sliding onto mounting plate.

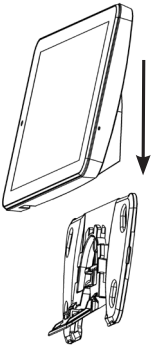

**4. Drop cover** behind Touchpad.

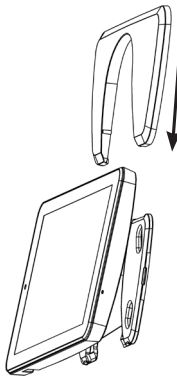


**5. Lock in cover** by pressing at these locations until snapped into place

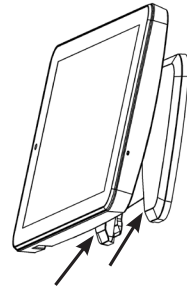

**6. Plug in power supply.**

## Menu Guide

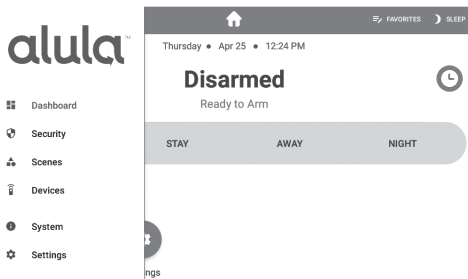

### Security

- History - shows event history
- Attention - shows all opened, bypassed, or troubled zone. Zones can be bypassed or activated by pressing the toggle to the right of the zone name.

### Scenes

- Create scenes from the Touchpad by clicking the "+ Add" button
- Enable/disable scenes with the toggle button
- Navigate to the edit scene page by selecting an item in the list
- Rename a scene by selecting the name label in the top bar
- Modify the scene by adding/removing triggers and actions

### Devices

- Add/Remove Z-Wave® devices using the "+ Add" or "- Remove" buttons in the app bar
- Lock and unlock Z-Wave door locks
- Turn Z-Wave lights on and off
- Set dimmer level for Z-Wave dimmer switches
- Open and close Z-Wave garage door openers
- Control Z-Wave thermostats

**\*\*PLEASE SEE Z-WAVE USER GUIDE FOR ADDITIONAL INFORMATION\*\***

### System

#### • Panel

- Troubles - shows all system troubles
- Status - shows all status updates

#### • Touchpad

- Battery - shows battery level and charging information
- Network - shows network the Touchpad is connected to
- Access point MAC
- Wi-Fi signal strength - must not be less than 35
- Response Time
- Wi-Fi channel
- Touchpad Firmware
- Touchpad Hardware
- Updater Firmware
- Serial Number
- FCC/IC information
- Uptime

## Settings

### • **Display**

- Brightness - adjust slide bar to change brightness level
- Auto sleep display - when enabled the Touchpad screen will go to sleep after programmed period of inactivity. When disabled the Touchpad screen will stay on and show the system overview page.
- Entry wake - when enabled the screen will turn on during entry delay
- Clean screen - ignores touch input on the screen for 30 seconds to allow user to clean the screen

### • **Sound** - adjust slide bar to change volume level

### • **Touchpad** (must enter code to access)

- Show Favorites - display favorites menu that shows frequently used zones, scenes, and devices on dashboard
- Show Panics - ability to turn off individual panics (this option can only be viewed when using installer or dealer code)
- Lock to Dashboard
  - When enabled only the dashboard menu can be accessed without an access code
  - When disabled no access code is needed to navigate outside of dashboard
- Return to dashboard - specifies time of inactivity before Touchpad will automatically return to dashboard
- Dock - specify the items to be displayed in the bottom dock
- Temperature Scale - option for displaying °F or °C
- Power Off

### • **Panel** (must enter code to access)

- Sensor Chime - enables or disables panel sensor chime mode
- Keypads - lists the panel's keypads
  - Rename keypads by selecting an item on the list and holding it for 2 seconds
- Communication Test mode
  - The Touchpad will begin testing communications and display "TESTING"
  - After one minute, the Touchpad will show the result of the test which will be either "GOOD," "FAIR," OR "POOR"
  - If you get a "POOR" test result, try the test again from another location
  - The table below lists the thresholds used to determine the outcome of the test
    - If any statistic falls in the poor range, the test outcome is "POOR"
    - If there are no poor statistics and any statistic is in the fair range, the outcome of the test is "FAIR"
    - If all statistics are in the good range, the outcome of the test is "GOOD"

<b>Statistic</b>	<b>Unit</b>	<b>GOOD</b>	<b>FAIR</b>	<b>POOR</b>
Wi-Fi Signal Strength	dB	Over 39	35 to 39	Under 35
Communication Success Rate	%	Over 89	85 to 89	Under 85
Response Time Average	ms	Under 200	200 to 250	Over 250


- **Panel** (Continued)

- Check for updates - this will tell the panel to check for any system updates
- Z-Wave
  - Join/Leave Another Z-Wave Network - the panel can be placed into Z-Wave inclusion or exclusion mode to allow it to join/ leave existing Z-Wave networks.
  - Soft Reset - a soft reset will reset the Z-Wave controller software. All Z-Wave devices will remain enrolled.
  - Hard Reset - this action will cause your Connect+ Z-Wave module to be restored back to the default state. Warning: Performing this action results in all Z-Wave devices being removed from this Z-Wave controller. To add them back, you will first need to exclude them, and then include them again.


**\*\*PLEASE SEE Z-WAVE USER GUIDE FOR ADDITIONAL INFORMATION\*\***

- About - lists information about the panel's installed hardware and software

# Home Screen Functions


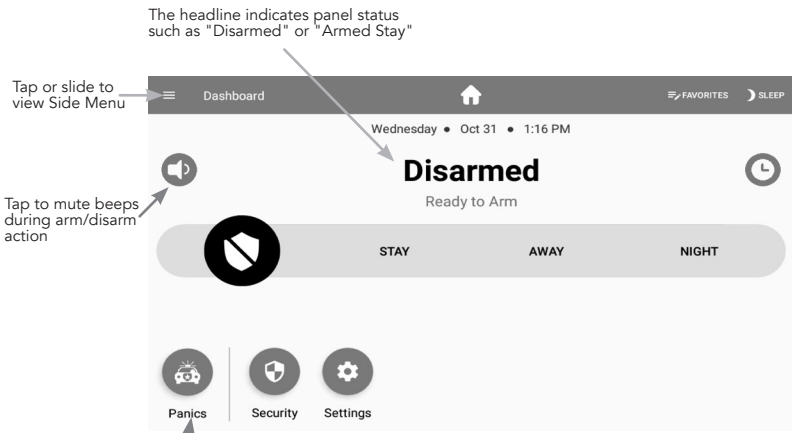


Tap to view Panic options and then press desired Panic option for two seconds to trigger

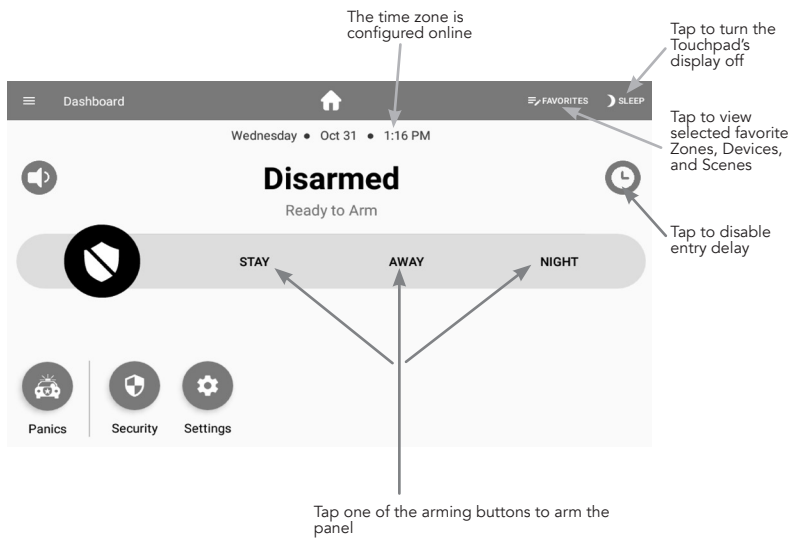



# Panic Functions

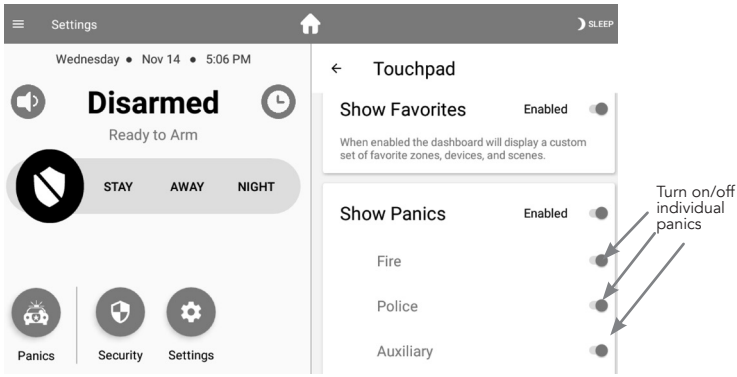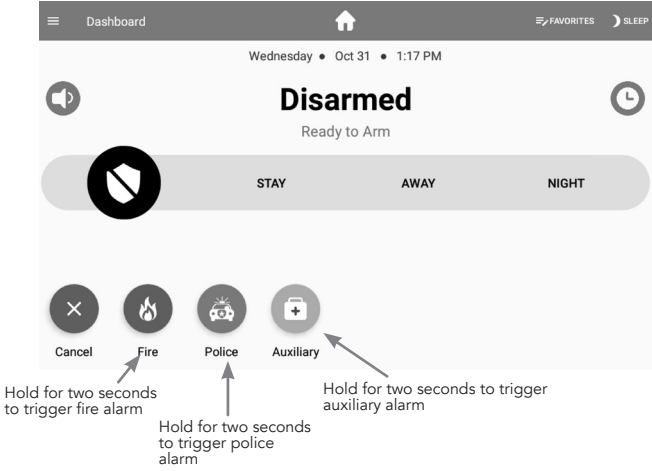


## Pro Tips

**Push any extra wire into wall** before sliding Touchpad onto mounting plate to ensure the wires don't get pinched. Drill a hole in the wall through any of the 4 mounting plate windows if no hole exists.

**The Touchpad display turns off on its own** after specified allotted time of inactivity (Auto sleep display setting). It will turn back on when the screen is touched, or for some alarm conditions. The screen can also be turned off manually by pressing "Sleep."

**To unenroll the Touchpad** navigate to the Settings menu and then to the section labeled "Panel." Put the panel into wireless enrollment mode and press the unenrollment button on the touchpad screen. Note: The unenrollment button is displayed only when the panel is in enrollment mode.

**To remove vanity cover,** insert a flat head screwdriver at the two points shown below and twist the screwdriver.

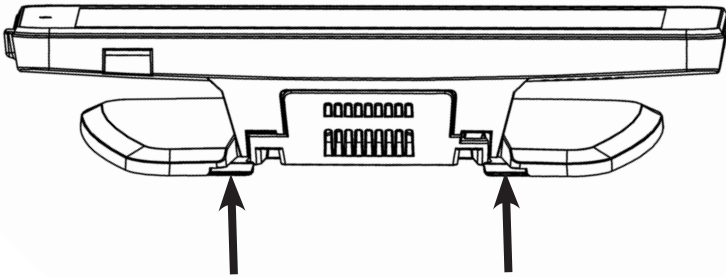

***THIS PAGE IS INTENTIONALLY LEFT BLANK***

# Specifications

Physical Specifications	
Wall Dimensions	4.27in[10.84cm] x 7.42in[18.85cm] x 1.60[4.06cm] Deep
Table Top Footprint	4.58in[11.64cm] x 7.42in[18.85cm] x 6.63[16.84cm] High
Weight	1.29lbs[585g]
Pilot Hole for Screw into Wood	Ø 1/8in [3mm]
Pilot Hole for Wall Anchor	Ø 3/16in [4.7mm]
Mounting Fasteners	#6 screws & 4 wall anchors (included)
Environmental Specifications	
Operating Temperature	32°F to 120°F (0°C to 49°C)
Maximum Humidity	85% non-condensing relative humidity
Device Specifications	
Battery Life	4 hours
Power Transformer	
Input	100-240vac 50/60Hz 0.5A
Output	12VDC, 1A
Part Number	RE012-6
Terminal Block Wire Gauge	16-24 AWG
Wireless Range	~300 feet in open air
Screen Resolution	1024 x 600 pixels
Screen Size	7 inches diagonally
Accessories	
Wi-Fi DeviceLink	RE926RX
Certifications	
RE667B, RE667W	FCC, IC

*Specifications subject to change without notice.*

## IC NOTICE

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux cnr d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage, et
- (2) L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## FCC NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference that may be received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Alula could void the user's authority to operate this equipment.

## TRADEMARKS

Alula and Connect+ are trademarks owned by Alula Holdings, LLC.

Z-Wave is a registered trademark of Silicon Labs.